

INSTALLATION INSTRUCTIONS

Tamper Resistant Kit R00, R04, R05, C04, R08, B08

**THIS INSTRUCTION SHEET IS APPLICABLE
TO ALL MINIATURE REGULATORS.**

INSTALLATION:

1. Adjust regulator to desired secondary pressure.
2. Snap off adjusting knob by rotating the panel nut counterclockwise to lift the knob off.
3. Align the three legs of the tamper resistant ring with the three mating slots in the bonnet.
4. Reposition the adjusting knob on to the bonnet and snap in place.

Note: It may be necessary to rotate the adjustment knob slightly to assure it engages the tamper resistant ring.

