

**THIS INSTRUCTION SHEET IS APPLICABLE
TO ALL R18 AND R28 REGULATORS.**

INSTALLATION:

1. Adjust regulator to desired secondary pressure.