

## WARNING

To avoid unpredictable system behavior that could result in personal injury and property damage:

- Disconnect electrical supply (when necessary) before servicing, or conversion.
- Disconnect air supply and depressurize air system before installation, servicing, or conversion of this product before installation, servicing, or conversion.
- Operate within the manufacturer's specifications and other conditions listed in these instructions.
- Medium must be moisture-free if ambient temperature is below freezing.
- Service according to procedures listed in the instructions.
- Installation, service, and conversion of this product should be performed by knowledgeable personnel. Safety procedures for pneumatic products are to be applied.
- After installation, servicing, or conversion, the product (when necessary) should be connected and tested for proper function and leakage. If audible leakage is present, the product does not operate properly, do not use.
- Warnings and specifications on the product should be clearly marked by paint, etc. If masking is not possible, use a representative for replacement labels.

## Installation

### Introduction

### Application Limits

### Operating Pressure Range



Operator Type	Operating Pressure Range
Electro-Pneumatic	0.2 to 1.0 MPa (3 to 150 psi)

### Ambient Temperature Range

Operator Type	Ambient Temperature Range
Electro-Pneumatic	-20 to 60 °C (-4 to 140 °F)
Electro-Hydraulic	-20 to 60 °C (-4 to 140 °F)

Voltage Range: 24VDC ±10%

### ANSI Symbols

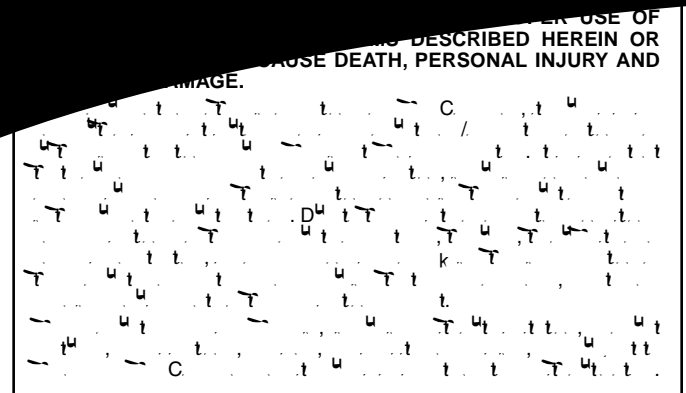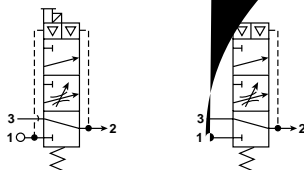

EXTRA COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FOR INCLUSION IN EQUIPMENT / MAINTENANCE MANUALS THAT UTILIZE THESE PRODUCTS. CONTACT YOUR LOCAL REPRESENTATIVE.

**Function**

