

INSTALLATION

1. Refer to the above warning.
2. Install as close as possible to point where air is being used.
3. Install a unit with the same pipe size as the one in use. Avoid using fittings, couplings, etc. that restrict the airflow.
4. Mount unit in a vertical position.
5. Maximum inlet pressure and operating temperature ratings are transparent plastic bowls, 150 psig (10,3 bar) and 125°F (52°C); metal bowls, 200 psig (14 bar) and 175°F (79,4°C).

MAINTENANCE

1. FILTER ELEMENT - Replace or clean periodically by removing filter, tapping on hard surface and blowing off with an air gun. When cleaning or replacing element, blow off louvers with air blow gun.
2. The unit is equipped with a manual petcock; drain the bowl at least once per work shift.
3. Before placing the unit back in service, make sure the bowl and bowl guard are reinstalled and clamp ring is securely locked in place.



.s, (T(s Guarumes will attack pwl w/m71 --5.6 8 0 7021848T w