

VERSON

Richland, MI 49083

Tel: (269) 629-5000

INSTALLATION

1. Refer to Warnings.

CAUTION! Depressurize Before Servicing!

2. Install at air inlet or tool if possible. Unit will operate in any position, allowing it to be mounted on air hose.
3. Install the unit with the air flowing in direction of arrow on body.
4. **MAKE SURE AIR SUPPLY IS TURNED OFF AND DEPRESSURIZED BEFORE REMOVING FILL PLUG.** Remove fill plug and fill unit. Use only clean oil, SAE 10 or lighter is best.
5. Unit must be moved periodically or it will not feed oil. **DO NOT** install on rigid, non-moving air lines.

MAINTENANCE

1. Remove flow tube occasionally and clean inside of body. Blow out flow tube with air gun. Be sure oil feed pin moves freely.

REPAIR KITS AND REPLACEMENT PARTS

O-Ring Kit	LRP-95-074
Brake Fill Plug Kit	LRP-95-254





ADVERTENCIA

EL FALLO O LA SELECCIÓN INCORRECTA O EL USO INCORRECTO DE LOS PRODUCTOS Y/O SISTEMAS AQUÍ DESCRITOS U OTROS ARTÍCULOS RELACIONADOS PUEDE RESULTAR EN MUERTE, LESIONES PERSONALES Y DAÑO A LA PROPIEDAD.

Este documento y demás información de la compañía, sus subsidiarias y distribuidores autorizados ofrecen opciones de productos y sistemas para